


BUSINESS ADDRESS:
207 N. Saginaw St.
Byron, MI 8418
(810) 266-6526
barnwood@timelesslumber.com



WAREHOUSE ADDRESS:
8440 Bennett Lake Rd.
Fenton, MI 48430
DATE: 12/19/2016
www.timelesslumber.com

Our corbel mantel mount

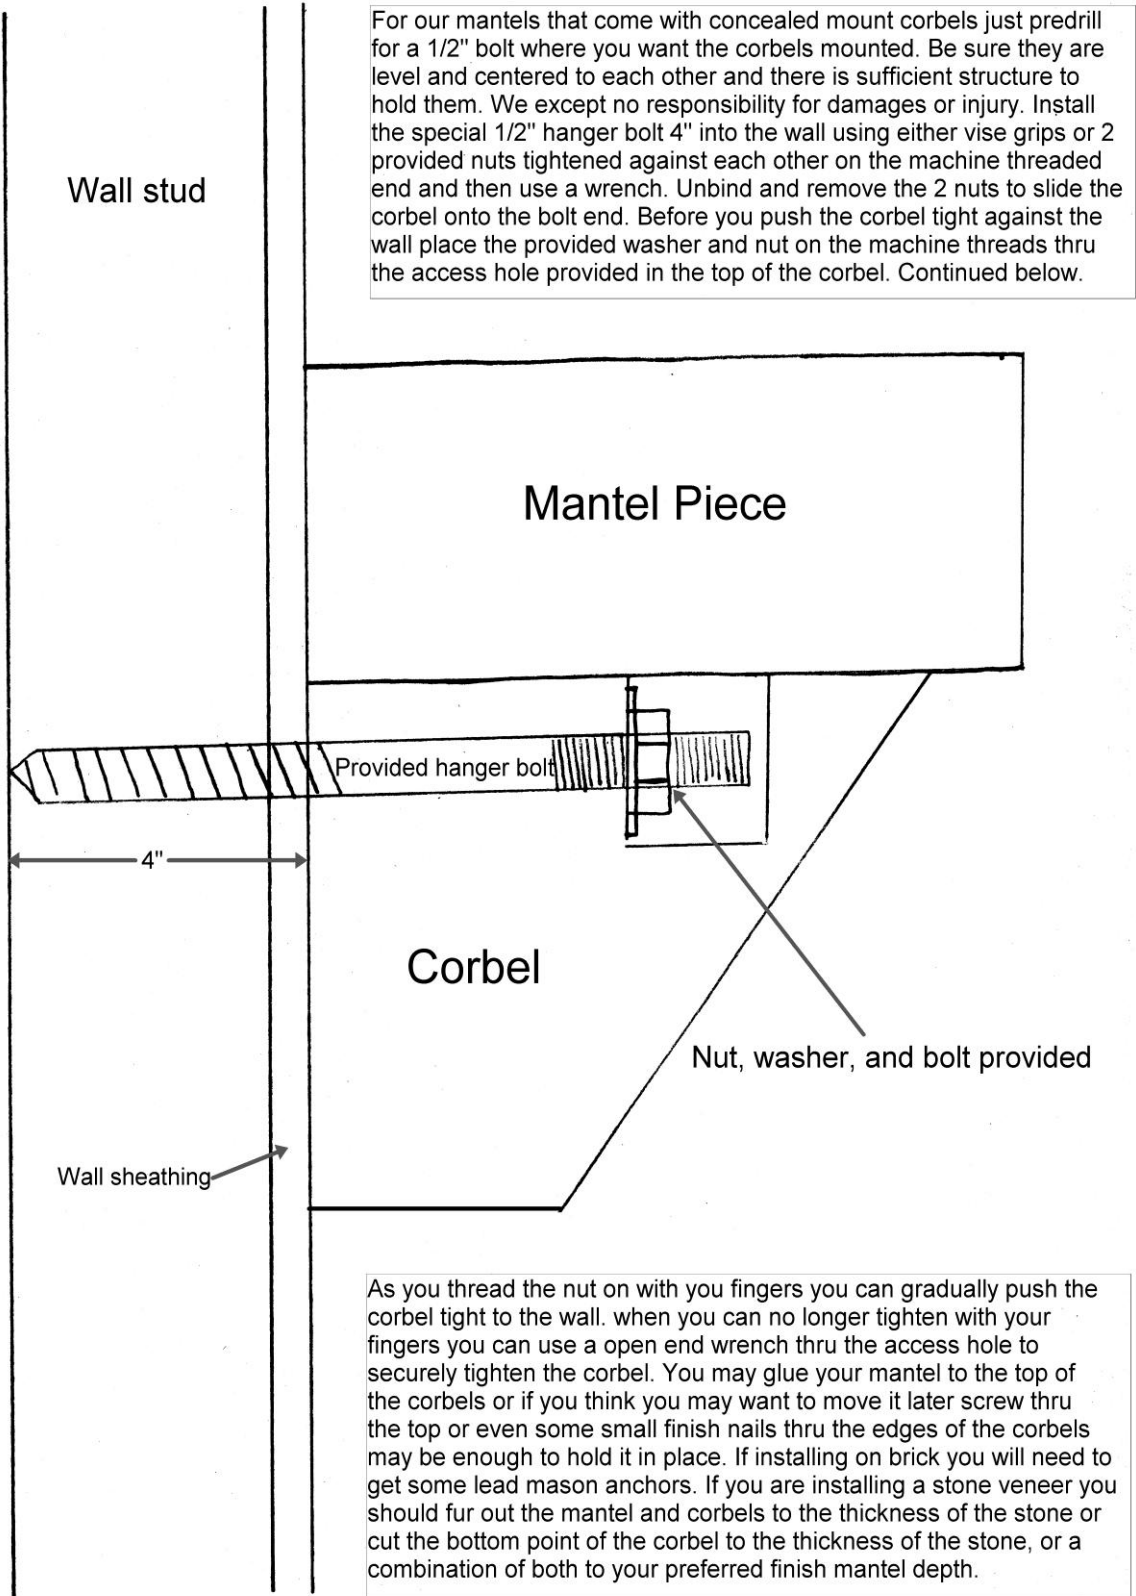

For our mantels that come with concealed mount corbels just predrill for a 1/2" bolt where you want the corbels mounted. Be sure they are level and centered to each other and there is sufficient structure to hold them. We except no responsibility for damages or injury. Install the special 1/2" hanger bolt 4" into the wall using either vise grips or 2 provided nuts tightened against each other on the machine threaded end and then use a wrench. Unbind and remove the 2 nuts to slide the corbel onto the bolt end. Before you push the corbel tight against the wall place the provided washer and nut on the machine threads thru the access hole provided in the top of the corbel. Continued below.

As you thread the nut on with you fingers you can gradually push the corbel tight to the wall. when you can no longer tighten with your fingers you can use a open end wrench thru the access hole to securely tighten the corbel. You may glue your mantel to the top of the corbels or if you think you may want to move it later screw thru the top or even some small finish nails thru the edges of the corbels may be enough to hold it in place. If installing on brick you will need to get some lead mason anchors. If you are installing a stone veneer you should fur out the mantel and corbels to the thickness of the stone or cut the bottom point of the corbel to the thickness of the stone, or a combination of both to your preferred finish mantel depth.

© 1995 Christopher Construction Company/Barnwood