


BUSINESS ADDRESS:
207 N. Saginaw St.
Byron, MI 8418
(810) 266-6526
barnwood@timelesslumber.com



WAREHOUSE ADDRESS:
119 N. Saginaw St.
Byron MI 48418
DATE: 10/26/2024
www.timelesslumber.com

Drywall concealed mantel mount

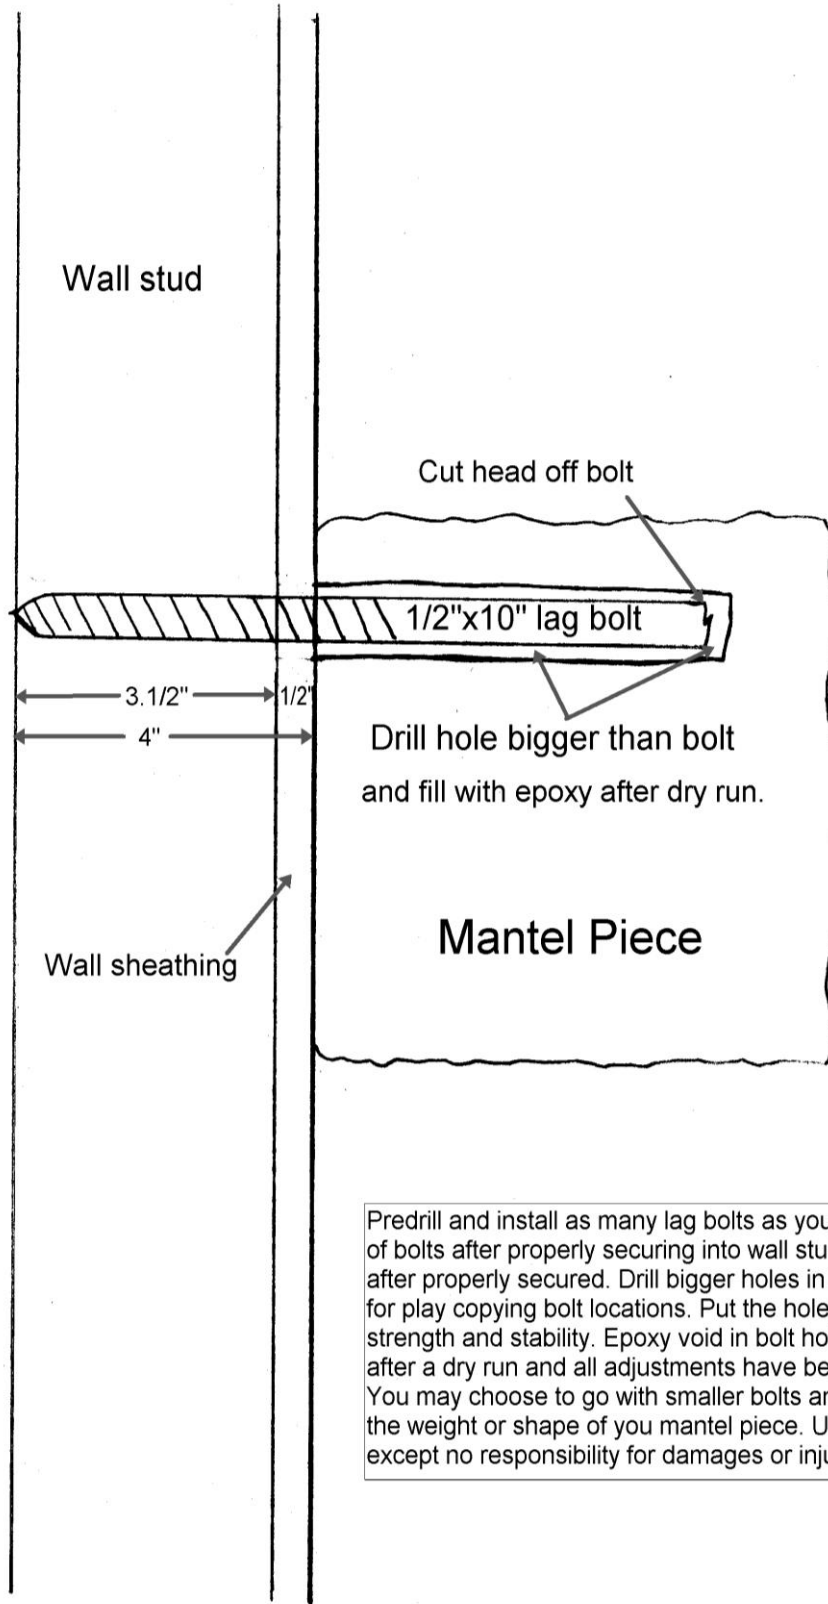

Predrill and install as many lag bolts as you have studs. Cut heads off of bolts after properly securing into wall studs. Cut heads off bolts after properly secured. Drill bigger holes in back of the mantel to allow for play copying bolt locations. Put the holes towards the top for better strength and stability. Epoxy void in bolt holes and on back of mantel after a dry run and all adjustments have been made for a good fit. You may choose to go with smaller bolts and anchors depending on the weight or shape of you mantel piece. Use your best judgment. We except no responsibility for damages or injury.

© 1995 Christopher Construction Company/Barnwood